



## #711 SHARK CX5™ WATCH INSTRUCTIONS

### FEATURES:

- CURRENT TIME
- DAY/MONTH/DATE
- CHRONOGRAPH
- LARGE DIGIT DISPLAY
- DAILY ALARM
- OPTIONAL 24-HOUR TIME
- WATER-RESISTANT TO 330FT/100M
- NIGHT VISION™ ILLUMINATION

### KEY REFERENCES



In normal time mode, the button functions are as follows:

LIGHT - Turns on the Night Vision™  
S1 - Displays the alarm time  
S2 - Displays the date  
S3 - Changes the function

### HOW TO SET NORMAL TIME

In normal time mode, press and hold the the S3 button for three seconds. Release the S3 button and press it again. The seconds digits will flash. Press the S1 button to reset the seconds to zero.

After resetting the seconds, press the S2 button to flash the minute digits. Advance the digits by pressing the S1 button.

Press the S2 button again to flash and set the hour digits. Advance the digits by pressing the S1 button.

Press the S2 button again to flash and set the month digits. Advance the digits by pressing the S1 button.

Press the S2 button again to flash and set the date digits. Advance the digits by pressing the S1 button.

Press the S2 button again to flash and set the day segments. Push the S1 button to select the correct day.

Press the S3 button to exit the normal time setting mode and enter the normal time mode.

### 24 - HOUR SETTING

To set the time in 24-hour mode, press and hold the S1 button. While holding the S1 button down, press the S3 button. The hour digits will change from 12-hour mode to 24-hour mode. 12-hour mode is represented by the AM or PM displayed in normal time mode. 24-hour mode will not show AM or PM.

### HOW TO VIEW THE DATE

In normal time mode, press and hold the S2 button to view the date in month-day format. To view the date in day-month format, press and hold the S2 button and at the same time press the S1 button. Use the same procedure to toggle between the two date formats.

### SETTING THE DAILY ALARM

In normal time mode, press and hold the S3 button until the hour digits begin to flash. Press the S1 button to advance the hour digits. Press the S2 button to flash the minutes digits. Advance the digits by pressing the S1 button. Push the S3 button to exit the alarm setting mode after it has been set.

### HOW TO TURN ON/OFF ALARM AND CHIME

In normal time mode, press and hold the S1 button. While holding down the S1 button, press the S2 button once to turn on the chime function.

Press the S2 button again to turn on the alarm function.

Press the S2 button again to turn off the chime function.

Press the S2 button again to turn off the alarm function. Release the S1 button to return to normal time mode.

### USING THE CHRONOGRAPH

In normal time mode, press the S3 button three times to enter the chronograph mode. Push the S2 button to start and stop the chronograph. To record a lap time, press the S1 button while the chronograph is running. The lap time will appear on the display, while the chronograph continues to run. Press the S1 button again to return to the chronograph. When the chronograph is stopped, press the S1 button to reset it back to zero.

### HOW TO OPERATE THE NIGHT VISION™

Press the LIGHT button to activate the Night Vision™ illumination. The light will remain illuminated for approximately four seconds.

### CARE AND MAINTENANCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

### WARRANTY INFORMATION

FreeStyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: FreeStyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or FreeStyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your FreeStyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. Please include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

FreeStyle  
Attn: Individual Returns  
47-50 33rd Street  
Long Island City, NY. 11101

Phone: 718-729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized FreeStyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch. Be sure to include a check, money order or credit card information for desired replacement parts. Please include \$8.50 for processing and handling.

Visit our website at:  
[www.freestyleusa.com](http://www.freestyleusa.com)



Freestyle  
Attn: Individual Returns  
47-50 33rd Street  
Long Island City, NY. 11101

Phone# 718-729-8890

Battery	\$ 4.00
Case	10.00
Bezel	6.00
Band(Polyurethane)	12.00
Band(Nylon)	7.00
Band(Metal)	20.00
California residents add	
7.25% tax	
Processing and handling	8.50
Total	\$ _____

Check or Money Order  
Master Card  
Visa

Account# \_\_\_\_\_ Expiration Date \_\_\_\_\_

Printed Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Phone Number \_\_\_\_\_

Signature \_\_\_\_\_